

# Frame Mark4-10 V3 Partizan Edition 10"

## User manual



---

## Content

|                          |   |
|--------------------------|---|
| 1. Components .....      | 3 |
| 1.1. Screws .....        | 3 |
| 1.2 Body kit.....        | 4 |
| 2. Assembly .....        | 5 |
| 2.1. Frame assembly..... | 5 |

# 1. Components

## 1.1. Screws



Fig. 1. M3 x 14 mm 7 pcs



Fig. 2. M3 x 10 mm 8 pcs



Fig. 3. M3 x 25 mm 4 pcs



Fig. 4. M3 x 18 mm 4 pcs



Fig. 5. M3 x 12 mm 4 pcs



Fig. 6. M3 x 8 mm 8 pcs



Fig. 7. M3 x 35 mm 8 pcs

## 1.2 Body kit



Fig. 8. Plate A. 1 pcs



Fig. 9. Plate B. 1 pcs



Fig. 10. Plate C. 1 pcs



Fig. 11. Fastener strap. 2 pcs



Fig. 12. Rubber pad. 1 pcs



Fig. 13. Arms. 4 pcs



Fig. 14. Bumpers. 2 pcs



Fig. 15. Camera holder. 2 pcs



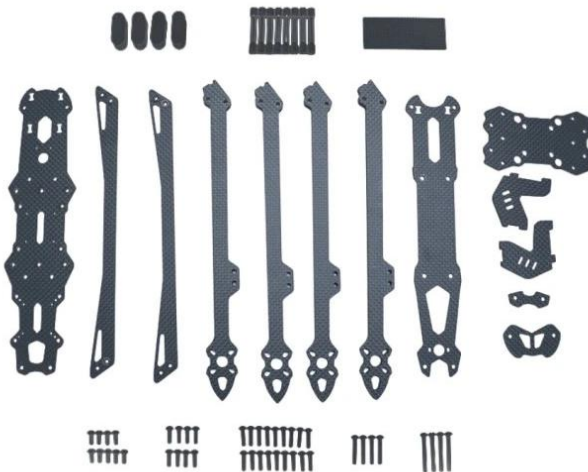
Fig. 16. Dampers. 4 pcs



Fig. 17. Frame braces. 2pcs

## 2. Assembly

### 2.1. Frame assembly

|                                                                                     |                                                                                                                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>Frame components.</p>                                                                                                                |
|   | <p>Take 4 pcs of arms (Fig.13), plate A 1pcs (Fig.8), plate B 1pcs (Fig.9), M3 x 18 mm 4 pcs (Fig.4) and M3 x 14 mm 6 pcs (Fig. 1).</p> |
|  | <p>Place 4 pcs of arms onto Plate A.</p>                                                                                                |



Place Plate B onto prepared assembly. Ensure that the holes in the arms are perfectly aligned with the holes in the plate.

Secure all components together using M3 x 18 mm 4 pcs as shown.




Secure all components together using M3 x 14 mm 6 pcs, screwing them into the pre-installed press-fit nuts as shown



The view from the opposite side should appear as shown below.

Take M3 x 35 mm 4 pcs (Fig.7).

|                                                                                     |                                                                                             |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|    | <p>Thread M3 x 35 mm 4 pcs onto the protruding screws and tighten them securely.</p>        |
|   | <p>Take M3 x 35 mm 4 pcs (Fig.7), M3 x 12 mm 2 pcs (Fig. 5) and bumper 1 pcs (Fig. 14).</p> |
|  | <p>Install them at the front end of the frame as indicated.</p>                             |

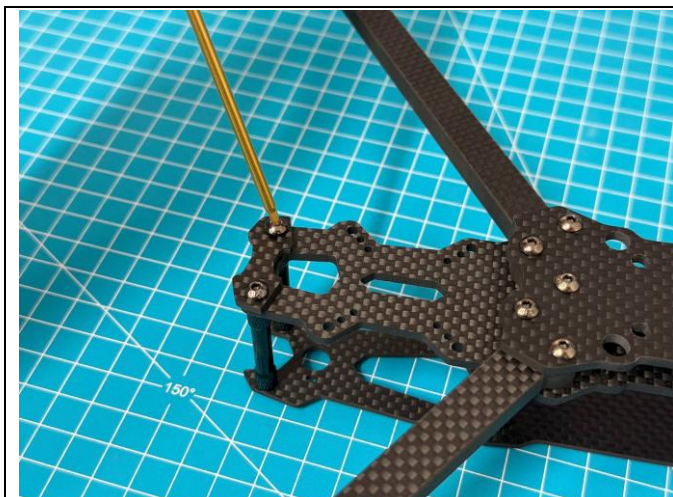


Take M3 x 35 mm 4 pcs (Fig.7), M3 x 12 mm 2 pcs (Fig. 5) and bumper 1 pcs (Fig. 14).

Install them at the rear end of the frame as indicated.



Take camera holder 2 pcs (Fig.15) and prepared assembly.

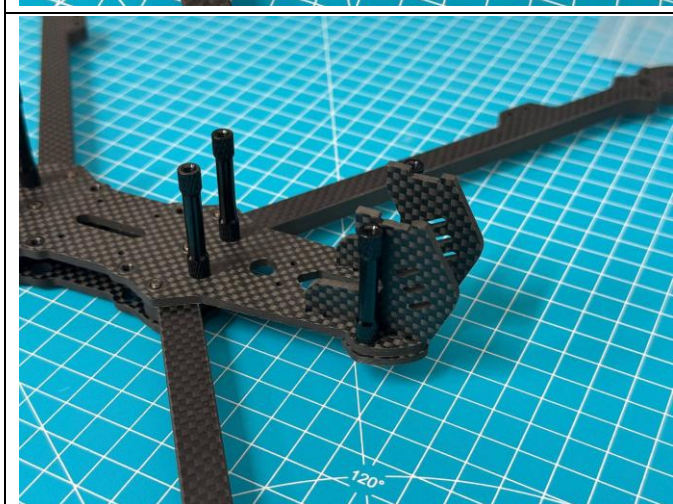

Install the two camera holders into the designated holes located at the front of the frame, as shown.

|                                                                                     |                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
|    | <p>Take plate C (Fig.10), M3 x 8 mm 8 pcs (Fig. 6) and prepared assembly.</p> |
|   | <p>Fully tighten all screws on the frame assembly.</p>                        |
|  | <p>Take frame braces 2 pcs (Fig. 17) and M3 x 10 mm 8 pcs (Fig. 2).</p>       |



Install the frame brace onto its designated position on the arm, as shown. Secure the assembly using four screws.



Take rubber pad 1 pcs (Fig.12) and prepared assembly.



Use the adhesive tape on the back of the pad to secure them firmly to the frame plate.  
Press down firmly for a few seconds to ensure a strong bond.

|                                                                                     |                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>Take dampers 4 pcs (Fig. 16) and prepared assembly.</p>                                                                                                         |
|   | <p>Use the adhesive tape on the back of the dampers to secure them firmly to the frame plate.<br/>Press down firmly for a few seconds to ensure a strong bond.</p> |
|  | <p>Final assembly.</p>                                                                                                                                             |